



# RC School Bus

60-2794



## What's Included

School Bus  
Transmitter Owner's Manual

### Step One

#### Installing Batteries

##### You will need...

Four AA batteries for the car  
One 9V battery for the transmitter  
Phillips screwdriver

##### Put AA Batteries in the School Bus

- Slide the **L/OFF/H** switch on the bottom of the School Bus to **OFF**.
- Loosen the screw on the battery compartment with a Phillips screwdriver and turn the latch on the side of the battery compartment clockwise to unlock it.
- Remove the battery compartment box from battery compartment.
- Insert four AA batteries and match the + and - signs with the product.
- Replace the box and turn the latch counterclockwise to lock it in place. Then, secure it with a screw.



##### Put 9V Battery in Transmitter

- Remove the screw on the battery compartment cover with a Phillips screwdriver and slide the cover off to remove it.
- Insert one 9V battery and match the + and - signs with the product.
- Replace the cover and secure with the screw.



### Step Two

#### Driving the School Bus

- Slide the **L/OFF/H** switch on the back of the School Bus to **L (Low)** or **H (High)** to select the volume level for the melody.
- Press the upright arrow on your transmitter to drive forward.
- Press the circle arrow to drive the School Bus backward and in a circle.
- Release the buttons to stop the School Bus.



When the School Bus is moving forward, the passengers move from side to side while listening to the melody that plays. No melody is heard when moving backward.

## Helpful Hints

- Running your School Bus for long periods of time can generate a high heat level, which results in wear and tear on the motor. When the battery power dies in your School Bus, let the vehicle cool down for 10 minutes before installing new batteries.
- If the motor runs, but does not respond to the transmitter, move the transmitter closer to the School Bus and try again.
- If someone is using a CB nearby, this may cause interference. Move your School Bus away from the CB.
- You cannot operate your School Bus near devices with transmitters that use the same frequency (27 MHz).

The FCC Wants You to Know

Your School Bus might cause TV or radio interference even when it is operating properly. To determine whether your School Bus is causing the interference, turn off your School Bus. If the interference goes away, your School Bus is causing it. Try to eliminate the interference by:


- moving your School Bus away from the receiver
- contacting your local RadioShack store for help

If you cannot eliminate the interference, the FCC requires that you stop using your School Bus.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications to this product not expressly approved by RadioShack, or operation of this product in any way other than as detailed by the Owner's Manual, could void your authority to operate the product.

FCC Declaration of Conformity

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Product:	RC School Bus
Model:	60-2794
Responsible Party:	RadioShack 100 Throckmorton Fort Worth, TX 76102
Phone:	817-415-4300

## Safe Care and Use

- The School Bus is not suitable for children under three years of age.
- Never play with the School Bus in the street.
- Handle the School Bus gently and carefully. Do not drop it.
- Keep the School Bus away from dust and dirt.
- Wipe the School Bus and transmitter with a damp cloth occasionally to keep them looking new. Do not immerse them in water.
- Keep this owner's manual for future use.
- Modifying or tampering with the School Bus' internal components can cause a malfunction and invalidate its warranty, as well as void your FCC authorization to use it. If your School Bus is not performing as it should, take it to your local RadioShack store for assistance.

## Battery Notes

- Any batteries purchased for use in this toy may pose a hazard to children.
- If your School Bus moves slowly, or not at all, replace the batteries with alkaline batteries from RadioShack.
- If the School Bus moves slowly after installing fresh batteries, check the wheels for lint, thread, hair, and/or dust.
- When the transmitter's range decreases, replace your batteries.
- Never leave dead or weak batteries in the School Bus or transmitter.
- Use fresh batteries of the required size and recommended type only.
- Do not mix old and new batteries.
- Never mix alkaline batteries with other types of batteries.
- If you do not plan to use the School Bus for several days, remove all batteries from the transmitter and the School Bus. Batteries can leak chemicals that may destroy electronic parts.
- Dispose of old batteries promptly and properly. Do not burn or bury them.

## Specifications

Batteries ..... Bus - 4 AA Batteries (not included)  
Transmitter - One 9V Battery (not included)  
Battery Life ..... 20 Minutes  
Frequency ..... 27 MHz  
Control Distance ..... 40-50 Ft.  
Speed ..... 100 Ft./Min.  
Recommended Age..... 3 and up

*Specifications are subject to change and improvement without notice. Individual units may vary.*

## Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99